



Schrock Systems RTA, Inc.


277 Lanes Bridge Road • Jesup, GA 31545
Phone (912) 427-7383 • Fax (912) 427-9602
Web - www.ssрта.com • Email - sales@ssрта.com

READY-TO-ASSEMBLE COMMERCIAL CABINET & DISPLAY SYSTEMS

3x4/4x4 ASSEMBLY INSTRUCTIONS

TOOLS NEEDED:

- PHILLIPS SCREWDRIVER 

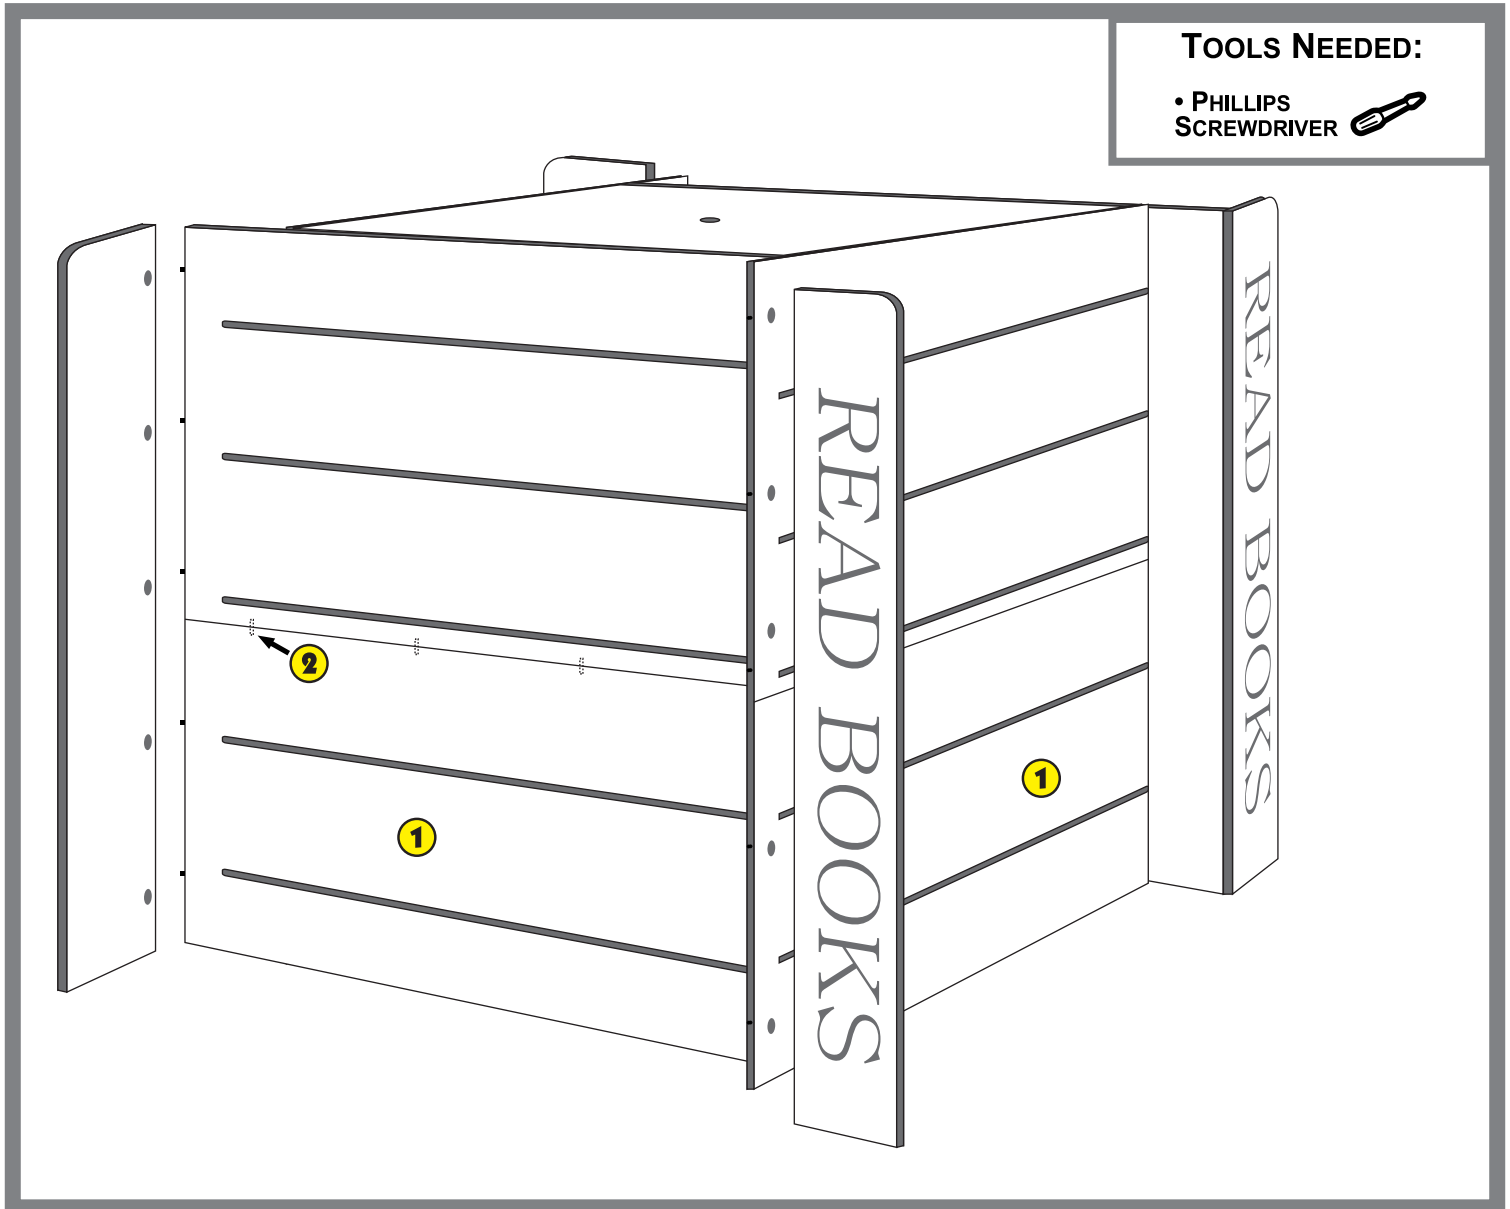

* Please use caution during assembly - panels are fragile until assembled.
We recommend at least two people help with assembly. *

1. Assemble all four bottom panels (1) as shown, inserting and tightening the screw end of the panel into the cam side of the adjoining panel. (Your display may differ slightly from the picture above) With the panel standing upright as pictured and with the slot openings facing to the RIGHT, the bottom panels will have the dowel holes (2) on the TOP edge of the panel. The top panels will have the dowel holes (2) on the BOTTOM edge.

– Confirm all fasteners have been tightened properly before using display. –