




Schrock Systems RTA, Inc.

277 Lanes Bridge Road • Jesup, GA 31545
Phone (912) 427-7383 • Fax (912) 427-9602
Web - www.ssрта.com • Email - sales@ssрта.com


READY-TO-ASSEMBLE COMMERCIAL CABINET & DISPLAY SYSTEMS

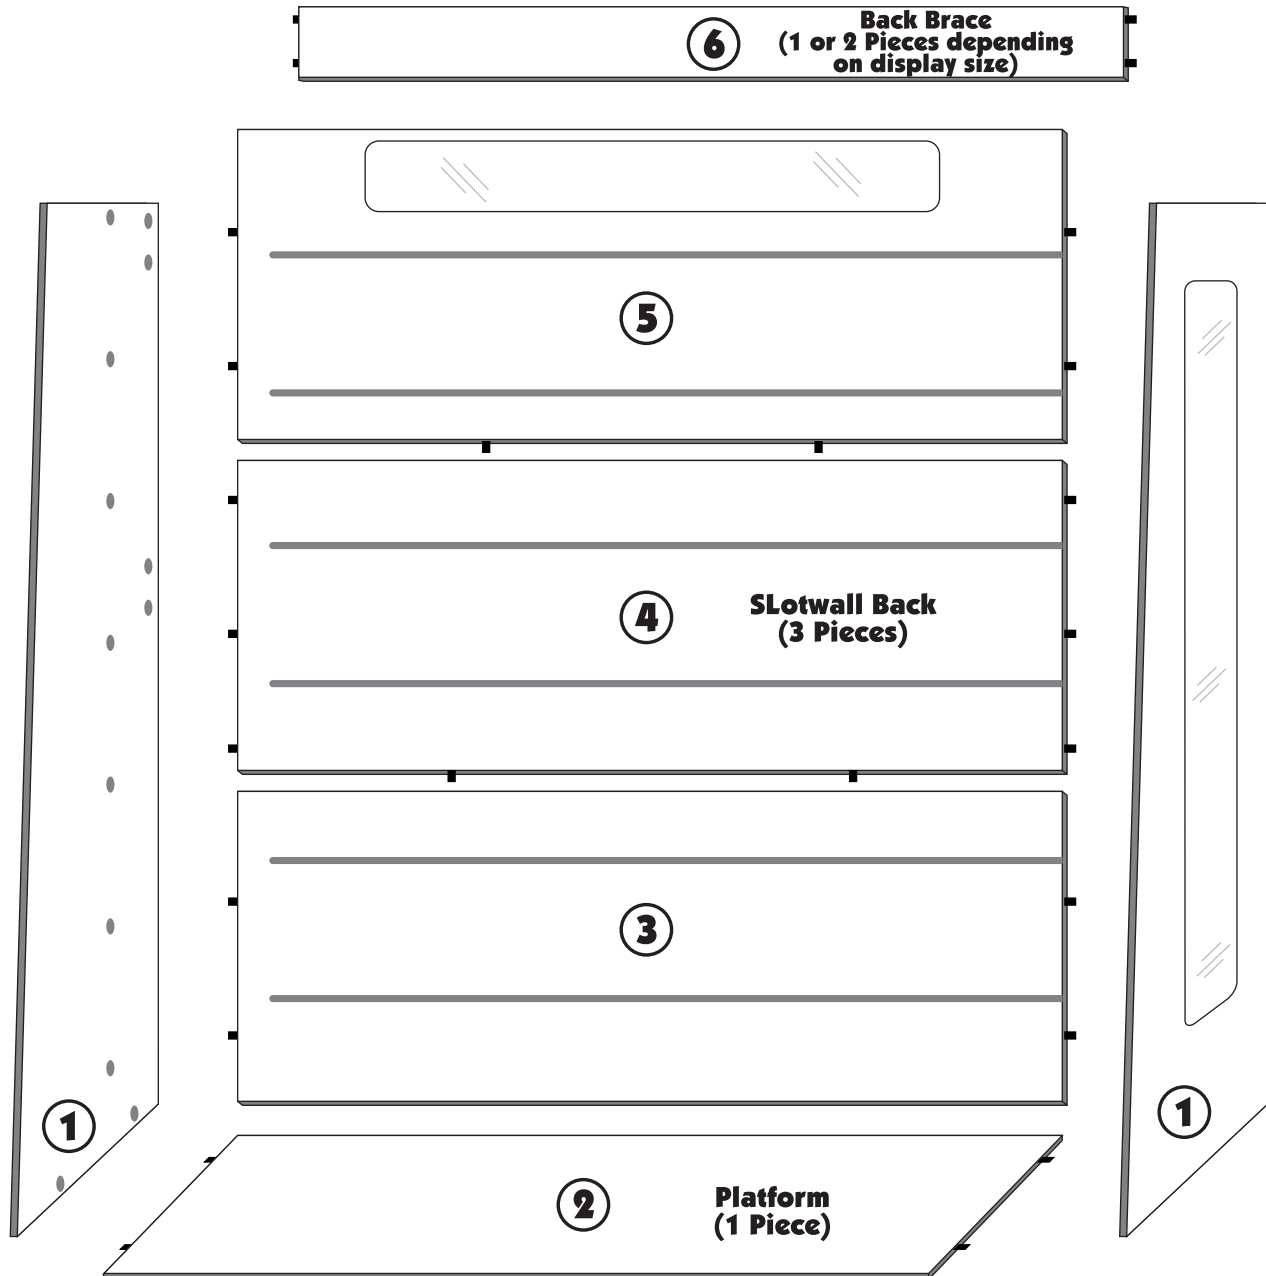

1. Lay end panel (1) logo side down on clean surface
2. Fasten pieces (2) - (6) onto end panel (1)
3. Place other end panel (1) onto assembled portion and fasten
4. Attach base (optional) to platform (2) with provided screws OR wing nuts
5. Lift entire unit upright

- All fasteners need to be tightened 1/2 turn clockwise with a phillips screwdriver -


Endcap Restraining Strap Instructions

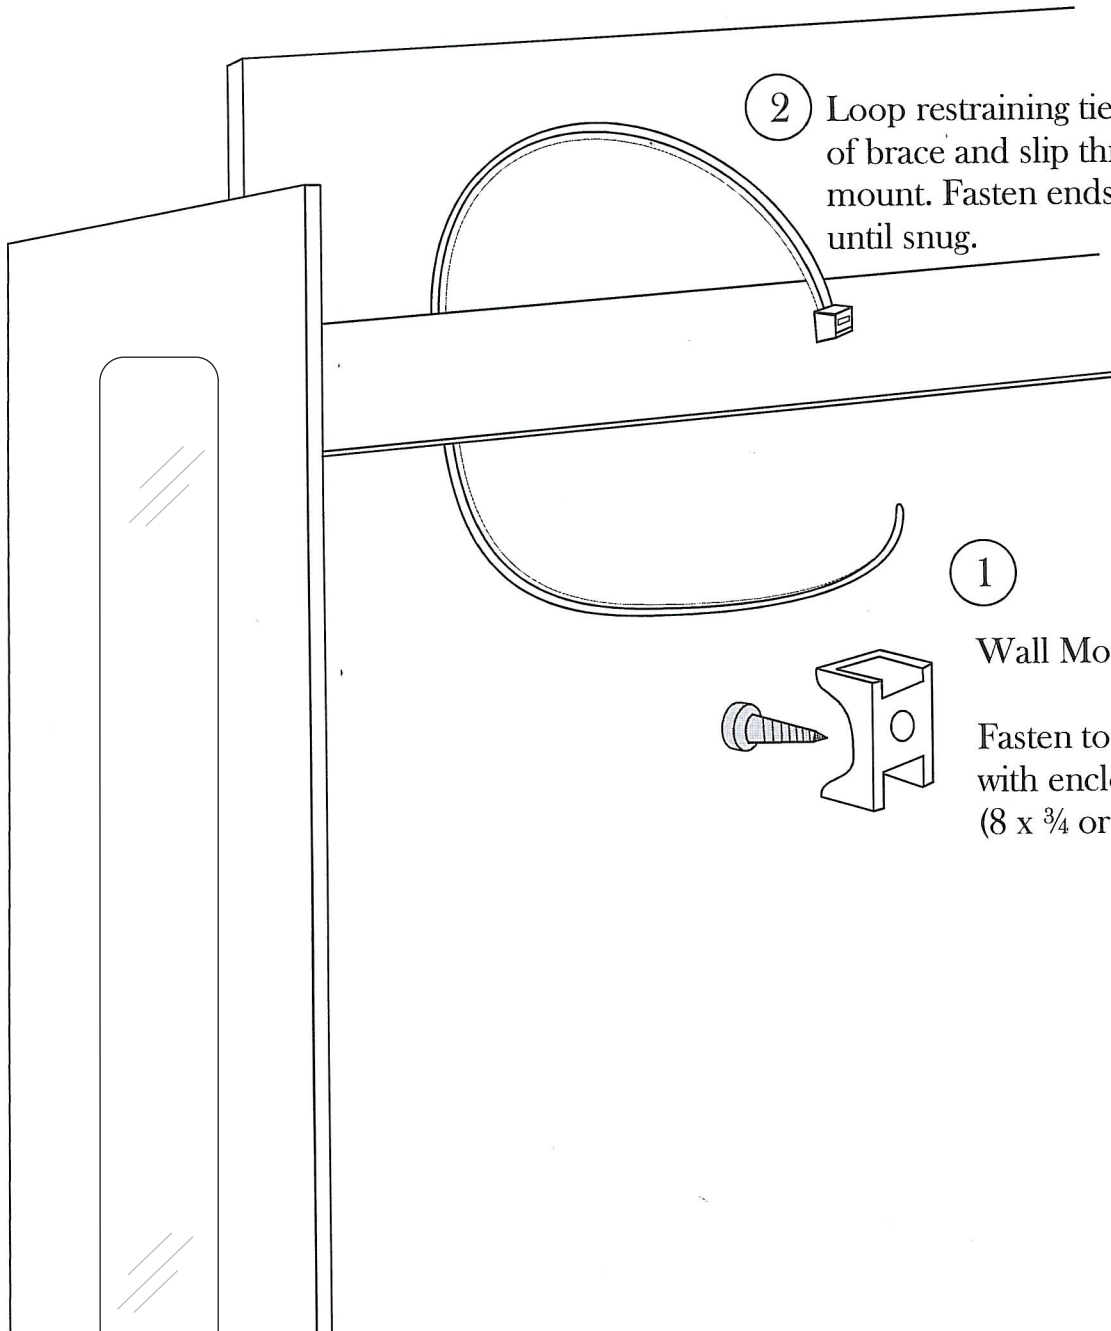

2 Loop restraining tie around back of brace and slip through wall mount. Fasten ends of tie and pull until snug.

1

Wall Mount

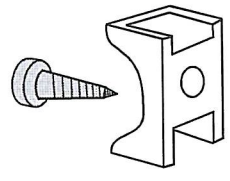

Fasten to wall or gondola with enclosed screws (8 x 3/4 or 8 x 1 1/4)