



19" HC HYBRID DISPLAY

•Assembly Instructions•

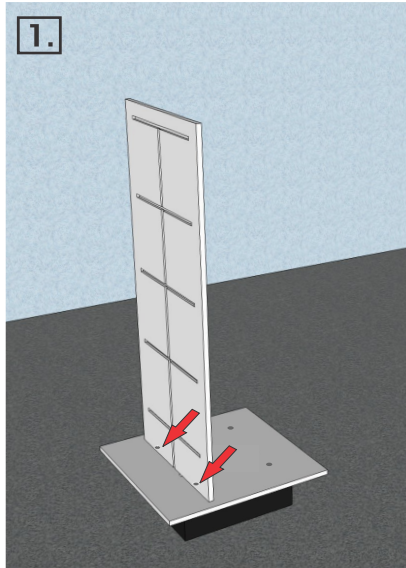


1. Insert one wide panel into fasteners on platform; tighten both fasteners.

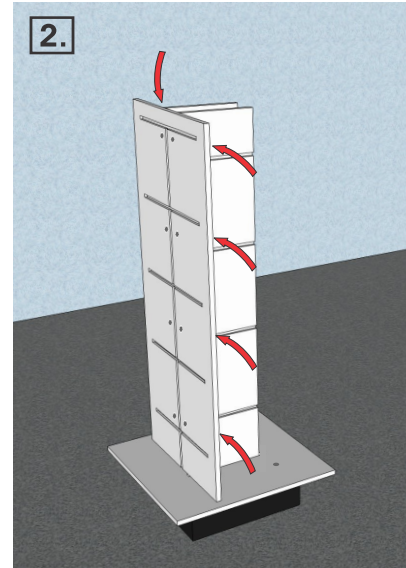


2. Attach both narrow panels to back side of wide panel, and tighten all (8) fasteners.

3. Insert 2nd wide panel into platform fasteners first (at slight angle), then carefully attach to sides of both narrow panels; tighten all remaining fasteners.

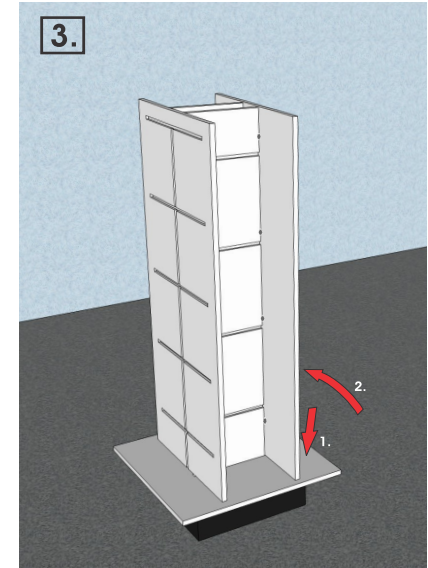

**All fasteners—
hand-tighten
only, do not
overtighten!**

4. Insert (4) black winglets into slots on platform, and attach to sides of wide panels using supplied (20) 10 x 3/4" trim screws into the predrilled holes on the panel edges.

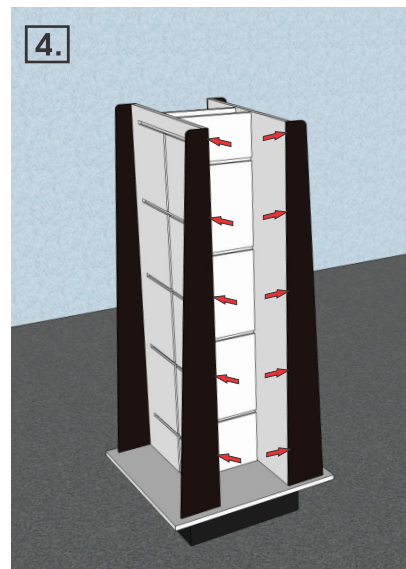

5a. Assemble header assembly with (2) supplied bolts into the threaded inserts in bottom of header.

5b. Insert header into top of display and secure with (2) supplied push pins.

